

Thank you for choosing the Evacuator GSM Text Alert System

The module is designed to transmit a text alert to up to 5 mobile handsets upon receipt of alarm activation input from an Evacuator alert system. The module is NOT designed to alert landlines.

The unit has been tested to operate with Vodafone and O2 Sim cards only. Problems have been experienced using Orange Sim cards.

Beware of pay as you go Sims. Once the user credit has expired no transmissions to mobile handsets will be possible – contract Sims are only recommended.

Using the module with your alert system.

All modules inputs and outputs are pre-programmed to operate with all Evacuator Alarm Systems.

Receiving mobile handset numbers and site names will also be programmed if **GSMForm1** has been completed and submitted to us at point of order. Site names and mobile handsets can be remotely programmed or amended once sited. **A £25.00 charge plus VAT will be applicable on all remote programming including amended site names or numbers.**

Once the unit has been sited and connected to both the GSM network and your Evacuator system you will be in a position to test the unit. This can be carried out by triggering the alarm system and observing the message/s coming into the mobile handset/s.

The first message you will receive from the Sim number in the unit will be **FIRE!! YOUR SITE NAME ACTIVATED. If the system is not reset via the Handset, Base Station or Call Point within 15 seconds the module will reinitialise itself in preparation for a further Text Warning.** You will see a message appear on the handsets **FIRE! SITE-NAME-DE ACTIVATED** followed by **FIRE! YOUR SITE NAME ACTIVATED** Note: This cycle will continue until a master reset has been carried out. **NOTE: The alert system will continue to sound whilst in this mode of operation until the cycle has been broken by a Master Reset.**

To Master Reset the system including closing down the sounders and strobes.

Send this message to the module **FIRE1 RESET ON** (note the spaces between the text) this will reset the whole system. A master reset can also be initiated Via the Base Station or call point on site. The module confirms that the Master Reset as taken place by returning a text **FIRE1 RESET ON**

It is good practice to save the Sim card number as a contact on your mobile handsets naming it the same as the site name that you receive on the message coming in.

For further information or to talk to support please contact during office hours.

Evacuator Alarms or its agents accept no responsibility for signal loss or performance of the unit.

This product is supplied subject to our standard terms and conditions (copy available upon request) E&OE

Evacuator Site Alarms support 0845-130-7258 www.evacuatorialarms.com

