



## Evacuator Synergy + TS Repeater Panel Instructions

### SYSTEM SET UP

Evacuator Synergy + Alert System Specification and user operating instructions.

Thank you for choosing the Evacuator Synergy + Wireless Alert system. In order for you to realise the full potential and reliability of this Category One Wireless system it is vitally important that you read this user manual in **full** before attempting to use the system. Failure to understand the correct installation method and functions of the system may lead to intermittent and unreliable connectivity.

We would be delighted to assist all Evacuator Alarm clients with free Telephone Support during office normal hours. For assistance please contact our Technical Support Team or alternatively visit our helpful Evacuator Alarms YouTube channel.

#### Specification Overview

Mains Powered Evacuator Synergy + TS Repeater Panel which enables users to receive addressable alerts from their Evacuator Synergy + System. This device cannot be used to program the system or provide other functions. First aid alerts are also not received to the Repeater Panel. Repeater Panel is navigated using the touch screen & three buttons. **Indoor Use only, Mains Powered Device**

#### Fitting the Antenna

The antenna should now be fitted to the Silver TNC docking point located on the top of the unit. The Antenna should be placed over the TNC connector and twisted in clockwise motion until it locates into place. Test that it has been located correctly by gently pulling on the Antenna in an outwards motion.

#### Connecting Power Supply


Attach the provided 3 pin plug adapter to the power supply. Now plug in the 3.5mm jack into the socket on the top edge of the product. Now Switch on the wall socket, the unit will power up by itself.

Please use the supplied 5v 2a power supply provided, failure to do so may damage the operation of the product.



# EVACUATOR

Site Alarms

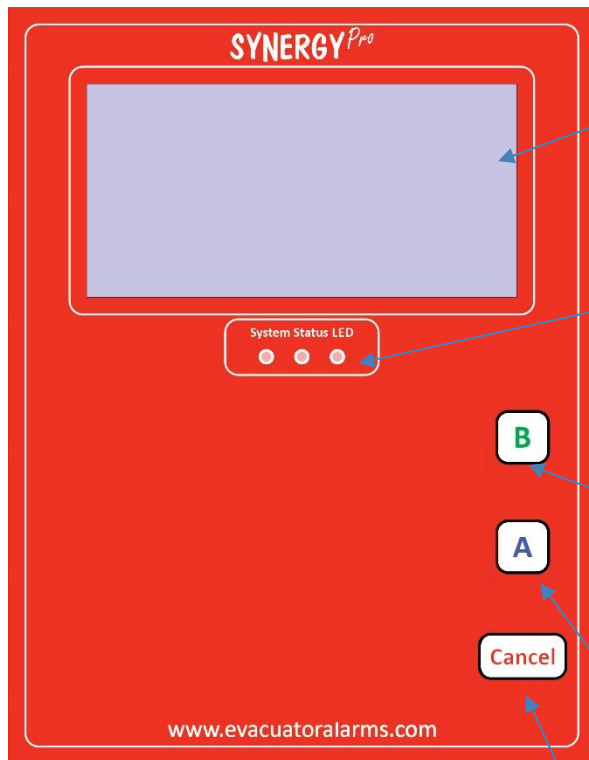

Touchscreen – Most operations are controlled via the Touchscreen

System Status LED's

B Button

A Button – Used to access the user menu.

Cancel Button – This Silences the system when in alarm state



# **EVACUATOR**

*Site Alarms*

## **Pairing to System**

To pair your Repeater Panel to your system first power on and leave for 1 minute for the boot up sequence to complete. Once complete Press the “A” button and you will be greeted with a passcode. Enter **5656**. Once the code is accepted you will be presented with another code with the heading Enter new house 4 digit code. The house code to your system will be found on the front of your main base station below the callpoint. If you take the final 4 digits of this code this is your house code (any B in the code is replaced with 0). For example BBBB123 would be code 0123. Once accepted press continue.

## **Testing**

To test the Repeater Panel you will need to perform a full alarm on one of the devices within your system. Your Repeater Panel will display the number of the device that was activated. Once completed Silence the system.

## **Evacuator 12 Month Limited Warranty**

All products manufactured by FMC (Firstmark Consultancy Limited), carry a 12-month warranty. This is a return to base warranty which includes manufacturing faults and defects, but does NOT include accidental damage, neglect, inappropriate use, any modification, or failure to follow instruction as to the, Storage, Installation, Commissioning, Use or Maintenance of the goods, or (if there are none) reasonable and sensible good trade practice. Any modifications to any parts of the goods will void the warranty including damage or removing of decals

Goods returned to base that are deemed to be faulty, will, at our discretion, either be replaced, credited or repaired

All goods supplied by FMC are intended to be supplied to and used by persons within trade and business ONLY, and therefore warranties are not transferable to members of the public.

All products are subject to Firstmark Constancy Limited’s Standard T&C’s

